


Installation Wiring Diagram Models LS051X1EX, LS051X2EX, LS051X3EX, LS051X4EX Two, Three or Four Relay Panels

Wiring for 1 -4 relay models with Enclosure

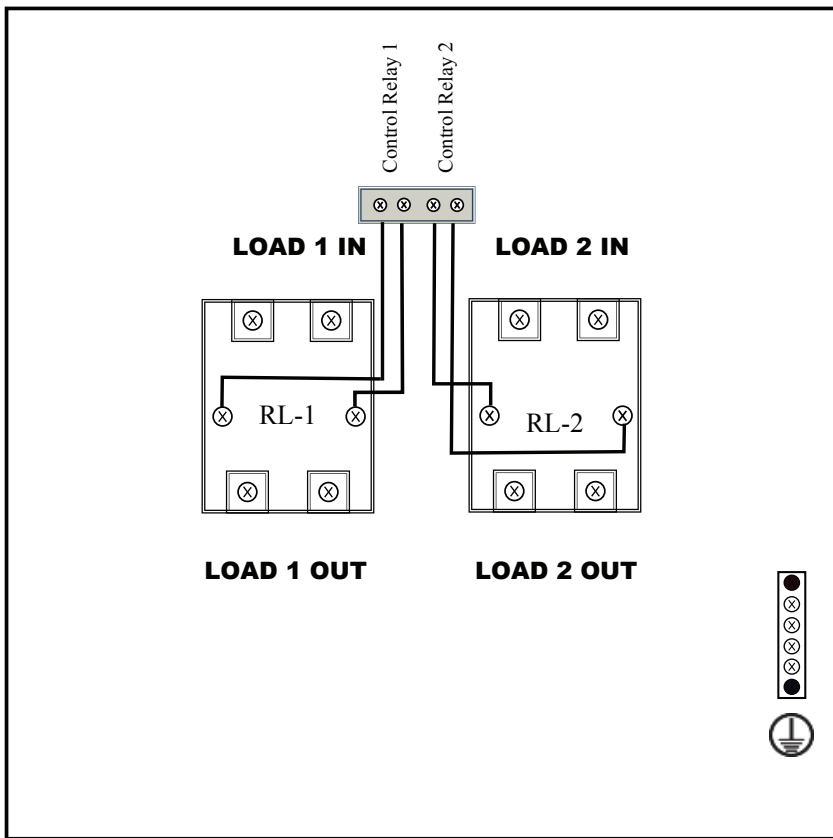

1. Input and output terminals blocks 1 and 2 torque to 35 in lbs 75° C wire only
2. Control terminals blocks torque to 5-7 in lbs W93° C 14 gauge wire only
3. Ground terminals blocks to be torque to 35 in lbs
4. Ground terminals blocks to be torque to 35 in lbs

VA Requirements

Holding VA	In-Rush VA
10 VA	20 VA

Important Note: Branch circuit fusing and disconnect to be provided based on local and N.E.C. standards.



Important: Risk of electrical shock. This device should only be installed by qualified personnel.

**Technical Assistance Call:
703-687-4057**